





## Toasting oven

### Dear Customer,

Before using the appliance, the user should read the following instructions carefully.

### Connection to the mains supply

The appliance should only be connected to an earthed socket installed in accordance with the regulations. Make sure that the supply voltage corresponds with the voltage marked on the rating label of the appliance. This product complies with all binding CE labelling directives.

### Familiarisation

1. Rating label (at the rear)
2. Main unit
3. Temperature control
4. Power cord with plug
5. Timer
6. Indicator lamp
7. Baking tray
8. Handle
9. Hinged bottom tray
10. Rack
11. Glass door
12. Door handle

### Important safety instructions

- Before the appliance is used, the main body as well as any attachments fitted should be checked thoroughly for any defects. If the appliance, for instance, has been dropped onto a hard surface, it must no longer be used: even invisible damage may have adverse effects on its operational safety.
- Do not position or operate the appliance close to or underneath any wall-cupboards or hanging objects such as curtains or any other inflammable materials.
- During operation, the appliance must be placed on a heat-resistant surface, impervious to splashes and stains. Do not

position the appliance on or near hot surfaces, open flames or inflammable vapours.

- Sufficient ventilation must be ensured at all times. Do not place any objects on the unit, and make sure that the following minimum distances from any wall or other object are maintained:

Side: 10 cm

Rear: 10 cm

Top: 30 cm

- Do not operate the appliance outdoors.
- The feet on the base of the unit must not be removed.
- Do not allow the power cord to touch hot surfaces.
- Do not let the power cord hang free.
- **Always switch the appliance off and remove the plug from the wall socket:**
  - after use,
  - in case of malfunction,
  - before cleaning.
- When removing the plug from the wall socket, never pull on the power cord; always grip the plug itself.
- Overheated oil or fat tends to ignite. Therefore do not overfill the baking tray.
- This appliance operates at very high temperatures.

**Warning:** the door as well as the accessible surfaces of the appliance become hot during operation. Burns can occur from touching these hot parts.



- Do not touch the accessible heating elements.
- Do not leave the appliance unattended while in use.
- The appliance is not intended to be operated by means of an external timer or separate remote-control system
- This appliance is not intended for use by any persons (including children) with reduced physical, sensory or mental capabilities, or lacking experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person

responsible for their safety.

- Children should be supervised to ensure that they do not play with the appliance.
- No responsibility will be accepted if damage results from improper use, or if these instructions are not complied with.
- This appliance is intended for domestic use only and not for commercial applications.
- In order to comply with safety regulations and to avoid hazards, repairs of electrical appliances must be carried out by qualified personnel, including the replacement of the power cord. If repairs are needed, please send the appliance to one of our customer service departments. The address can be found in the appendix to this manual.

### Before using for the first time

- Clean the appliance (see *General care and cleaning*) and completely remove any packing materials.
- Packaging materials are not children's toys (**Caution:** danger of suffocation).
- Before using the appliance for the first time, let it heat up for 10 minutes (see *Operation*). When the appliance is switched on for the first time, a slight smell may be emitted. This is normal and will only last for a very short time. Ensure sufficient ventilation.

### Temperature control

Turn the temperature control to the desired setting.

The heating elements will only switch on after the timer is activated.

### Timer

By using the timer, the cooking time can be selected (max. 60 minutes).

To set a time of less than 5 minutes, turn the timer to a somewhat higher setting first and then slowly turn it back to the desired time setting.

The indicator lamp is on while the appliance is switched on via the timer.

After the pre-programmed time has elapsed, an acoustic signal indicates that the heating elements are switched off. The indicator lamp goes out.

### Handle

The handle is used to remove the baking tray and the rack. Please note that the handle holds the tray by the upper and lower grips, while the rack is supported by the two lower hooks and the lower grip, when it is removed (see diagram).

### Operation

- Fit the rack.
- Pre-heat the oven compartment for several minutes with the door closed, using the temperature control to set the required temperature, and the timer to set the desired pre-heating time.
- Place the food to be cooked onto the rack. When cooking food containing fat or moisture, use the tray to stop any drips into the interior of the appliance.
- Always place the tray on the rack and then slide it into one of the guide rails.
- Close the glass door and use the timer to choose the desired cooking time.
- After the pre-programmed cooking time has elapsed, the timer will automatically switch off the heating elements. To switch off the appliance earlier, set the timer to the '0' position .
- When opening the hot glass door after operation, always use the handle. To remove the baking tray or the rack, always use the handle provided. Always place the tray and rack on a heat-resistant surface.
- After use, set the temperature control to the '●' position and remove the plug from the wall socket.

### General care and cleaning

- Before cleaning the appliance, ensure it is disconnected from the power supply and has cooled down **completely**.
- To avoid the risk of electric shock, do not

clean the appliance with water and do not immerse it in water.

- Do not use abrasives or harsh cleaning solutions.
- The exterior of the appliance may be wiped with a slightly damp, lint-free cloth.
- To release the hinged bottom tray, place the unit on its back and push the knob-like protrusion on the tray.
- The baking tray, rack and bottom tray may be cleaned with a mild household detergent.
- Do **not** put in a dish-washer.

### Disposal



Do not dispose of old or defective appliances in domestic garbage; this should only be done through public collection points.

### Guarantee

This product is guaranteed against defects in materials and workmanship for a period of two years from the date of purchase. Under this guarantee the manufacturer undertakes to repair or replace any parts found to be defective, providing the product is returned to one of our authorised service centres. This guarantee is only valid if the appliance has been used in accordance with the instructions, and provided that it has not been modified, repaired or interfered with by any unauthorised person, or damaged through misuse.

This guarantee naturally does not cover wear and tear, nor breakables such as glass and ceramic items, bulbs etc. If the product fails to operate and needs to be returned, pack it carefully, enclosing your name and address and the reason for return. If within the guarantee period, please also provide the guarantee card and proof of purchase.